


# PANELLIFT® Cradle Tilt Memory Control Installation Guide

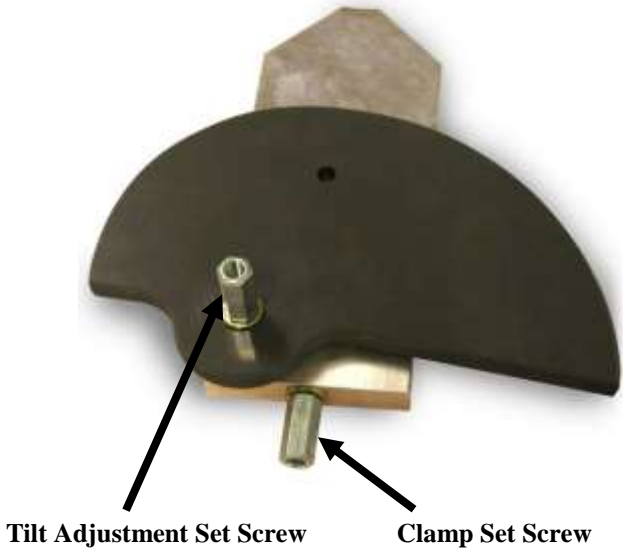

Tilt the PANELLIFT® Cradle into the loading position and set the Cradle Tilt Memory Control inside the Mounting Head Assembly (FIG 1).

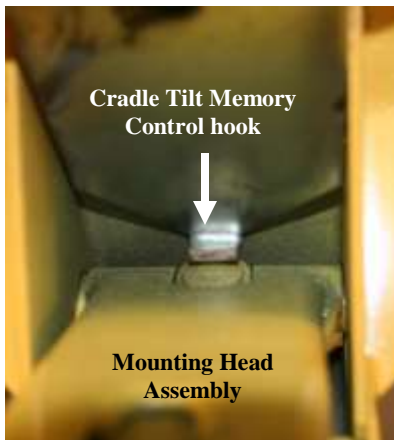


FIG 2

Set the hook under the Cradle Tilt Memory Control to engage inside the Mounting Head Assembly (FIG 2).

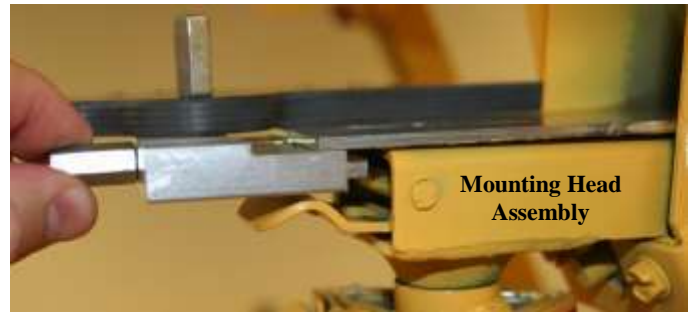


FIG 3



The Cradle Tilt Memory Control body should lay flat on the PANELLIFT® Cradle Mounting Head Assembly (FIG 3).

Tighten the Clamp Set Screw (FIG 3 & 4)



Use the Tilt Adjustment Set Screw to Loosen the Tilt Adjustment and tighten it down at the desired angle (FIG 5).